




Hur man konfigurerar TWAIN-drivrutinen

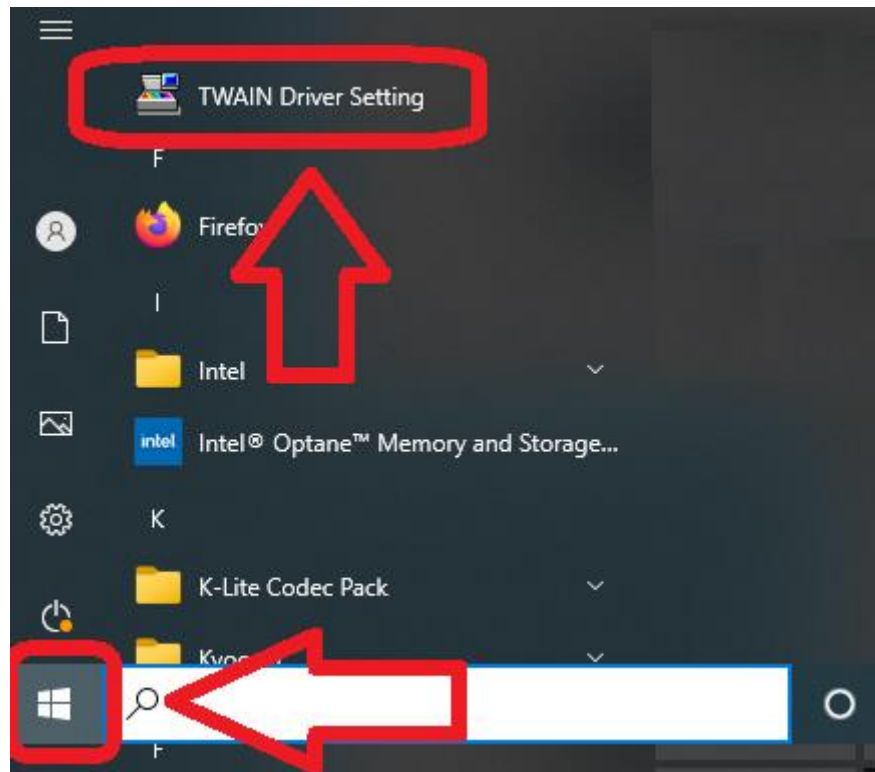


Om du använder en USB-anslutning

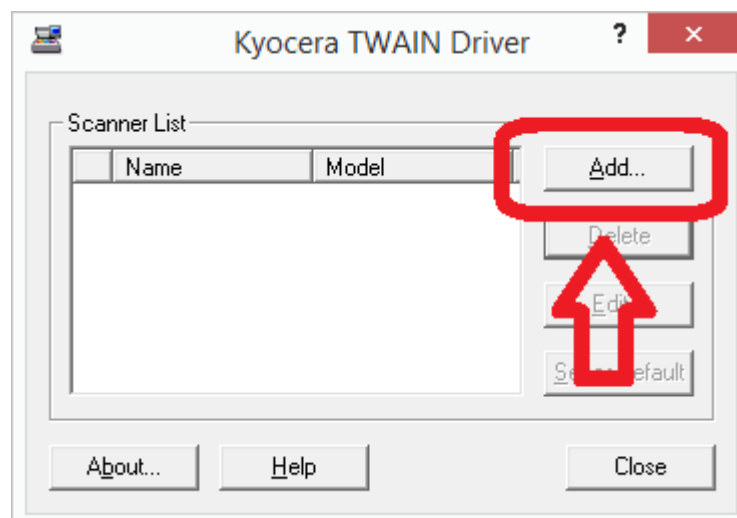

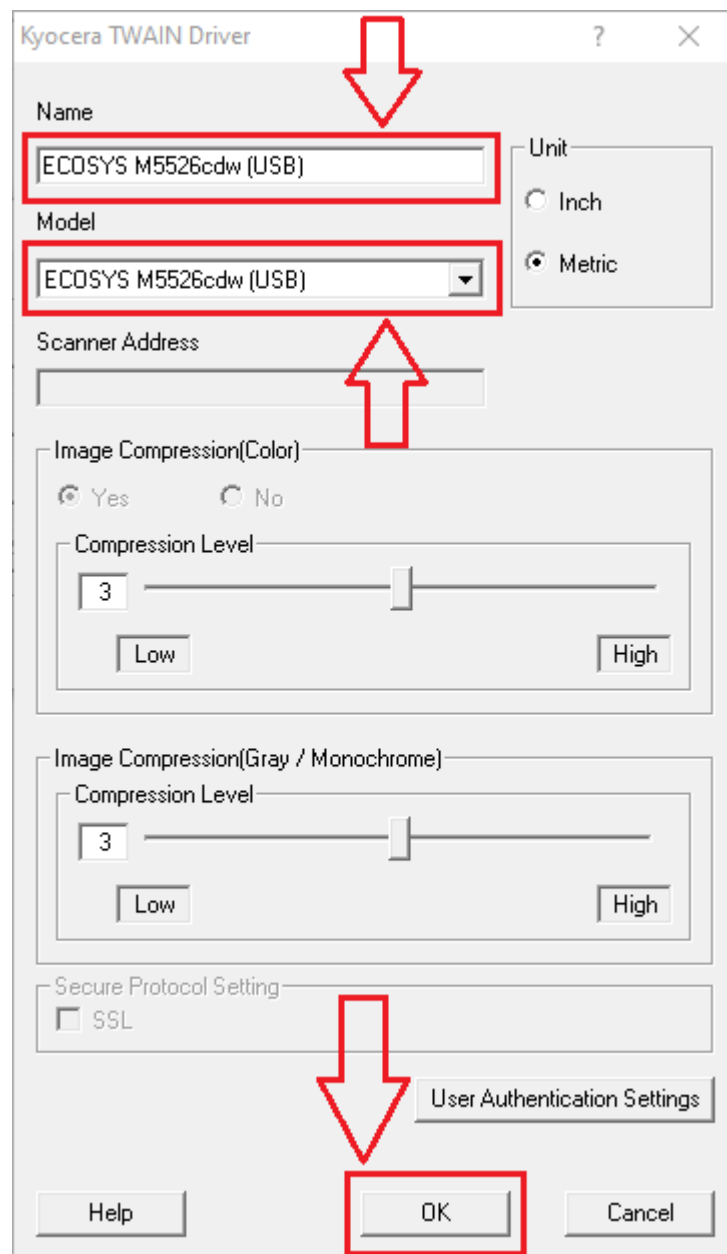

1. Select the *printer model (USB)* from the **Model** list
 - not / models
2. Input a suitable value into the **Name** field
3. Select **OK**

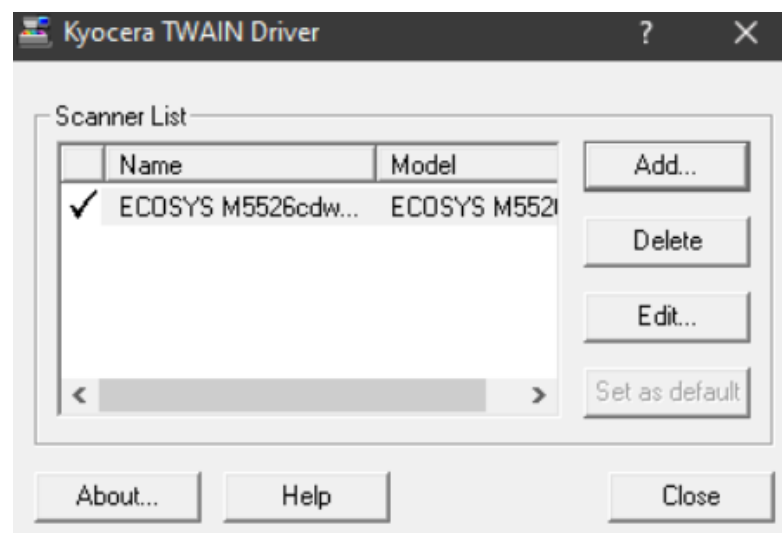

Om du använder en NÄTVERK-anslutning

Kyocera TWAIN Driver

Name
ECOSYS M5526cdw (Network)

Model
ECOSYS M5526cdw

Unit
 Inch
 Metric

Scanner Address
192.168.1.200

Image Compression(Color)
 Yes No

Compression Level
3
Low High

Image Compression(Gray / Monochrome)
Compression Level
3
Low High

Secure Protocol Setting
 SSL

User Authentication Settings

Help OK Cancel